

Vehicle:	Ford Fiesta Mk7 / Mk8 ST
Product:	Exhaust Tunnel Brace
Part number:	ATMSFO190



Kit Contents:

1 x AIRTEC Motorsport Exhaust Tunnel Brace	
--	--

Tools Required:

Ratchet and Socket Set	Flat-Blade Screwdriver or Small Trim Removal Tool
------------------------	---



PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:


1. To start, remove the eight plastic push fittings (four each side) securing the plastic covers on either side of the exhaust system using a trim removal tool or flat-blade screwdriver.



2. Now remove the 12 10mm bolts to release the sides of the plastic covers. You can leave the front parts attached as the covers do not need to be fully removed.

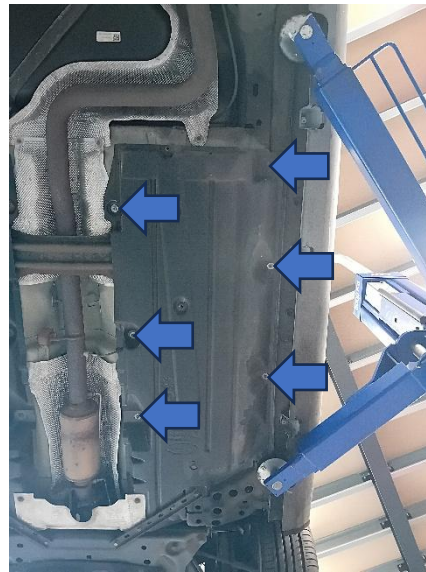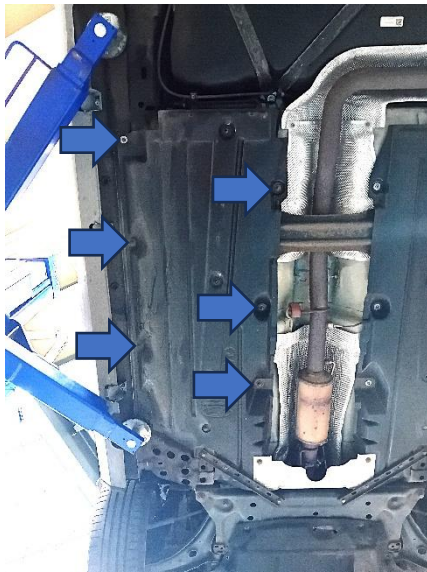

3. Locate the original exhaust brace and remove the eight 13mm nuts securing it in place.

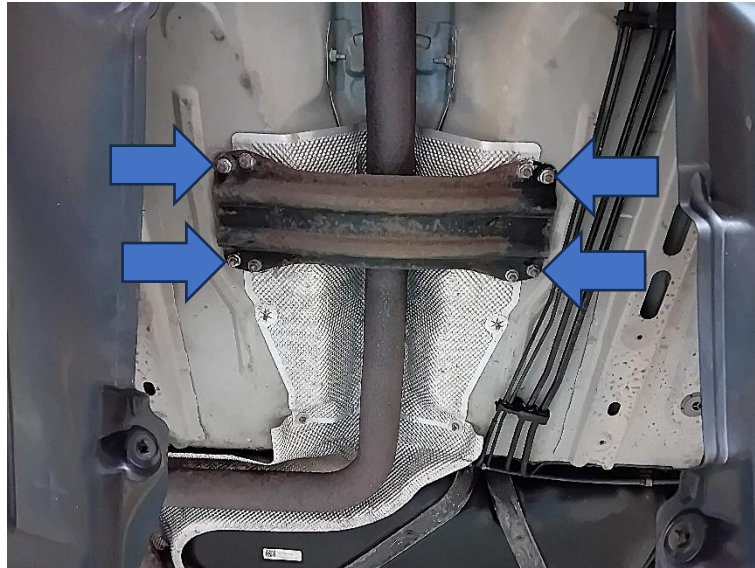

4. Attach your new AIRTEC Motorsport exhaust tunnel brace using the original fixings removed in Step 3.



5. Finally, reinstall the plastic side panels in reverse of removal.

