


AIRTEC Fitting Instructions

Vehicle:	Toyota Yaris GR
Product:	Catch Can
Part number:	ATMSYGR02

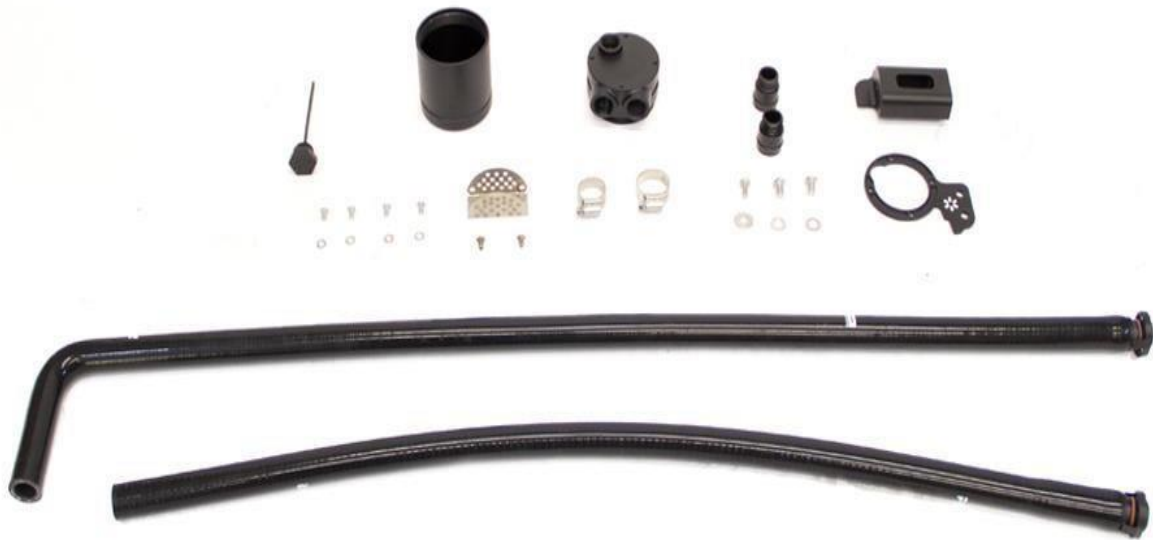

Kit Contents:

1x AIRTEC Motorsport CNC Catch Can	2x M8x12mm Button Head Bolts
1x AIRTEC Motorsport Mounting Bracket (Two Piece)	1x M8 Washers
1x Pro Hoses Silicone Hose Kit (Two Hoses)	1x M5x16mm Button Head Bolt
2x Straight Push Fit Connectors	1x M6 Washer
2x Jubilee Clips	2x Cable Ties

Tools Required:

Ratchet and Socket Set	Allen Key Set
Hose Clamp Pliers Screwdriver	Jubilee Flexi-Driver or Flat-Bladed


PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:


1. Start by removing the engine cover by lifting each corner and pulling away.



2. Locate the original breather hose on top of the engine and release the clamps to remove it.

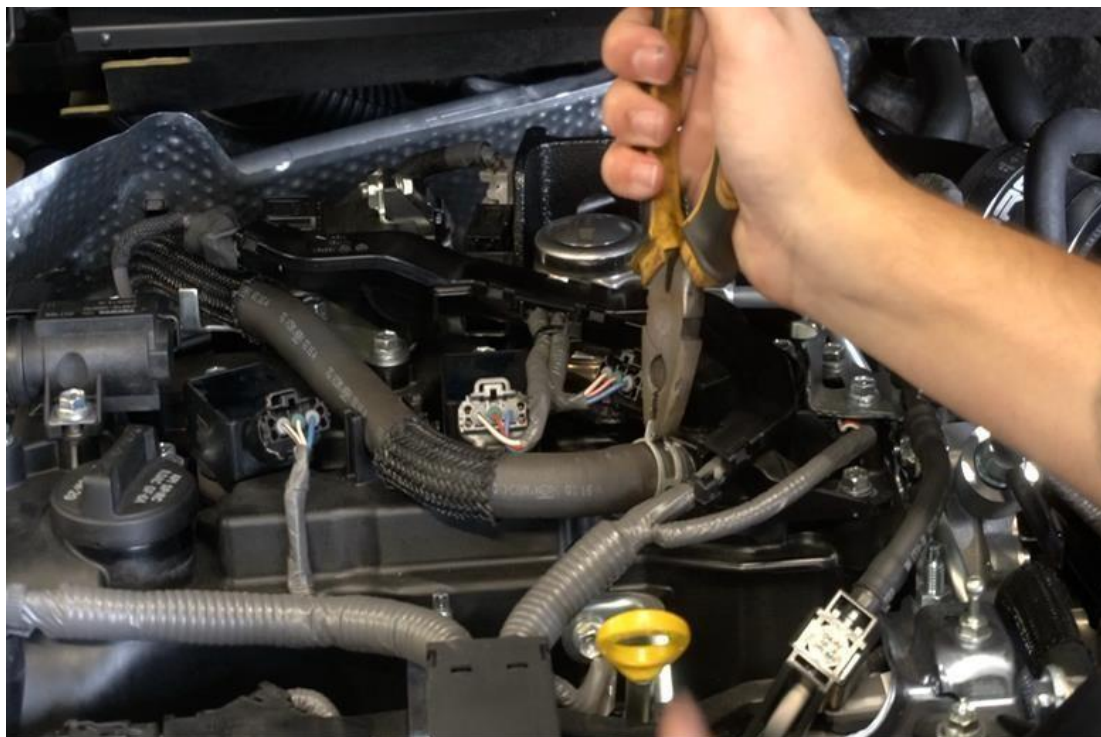

3. Install the lower part of the mounting bracket to the slam panel using the supplied M6 bolt and washer through the existing hole in the underside of the slam panel.

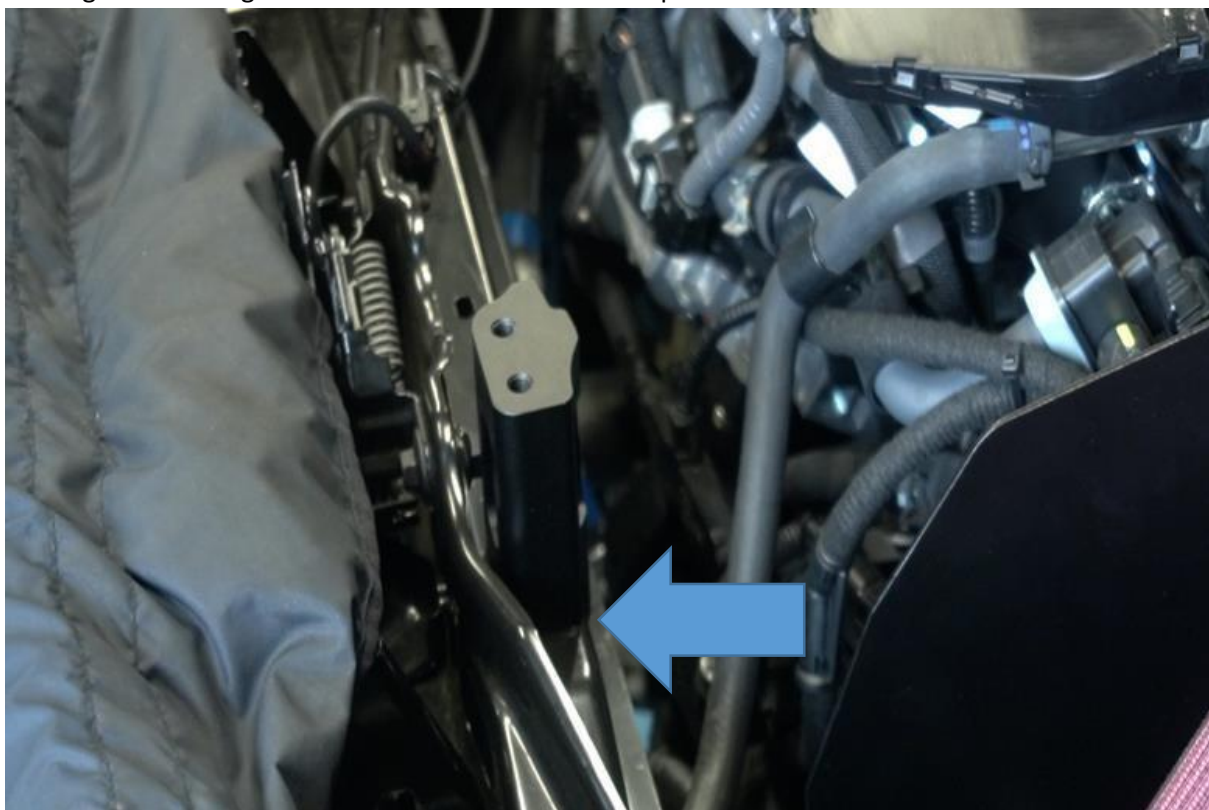

4. Now install the mounting bracket to the catch can as shown.



5. Mount the catch can to the lower part of the bracket installed in Step 3 using the two M8 bolts and washers supplied in the kit.



6. Now install the straight silicone hose to the outlet on the catch can closest to the front of the car by pushing it on until you hear it 'click'. Then route the pipe under the coolant hose and onto the engine's top connection using the supplied jubilee clip to secure.

Then install the second silicone hose to the remaining connection on the catch can by routing it under the coolant hose to the take-off on the inlet pipe at the rear of the engine bay and secure using the supplied jubilee clip.



7. Finally, you can then use the supplied cable ties to secure the hoses together and reinstall the engine cover.

