

AIRTEC MOTORSPORT Fitting Instructions

Vehicle:	Toyota Corolla GR
Product:	Catch Can
Part number:	ATMSCGR2



Kit Contents:

1x AIRTEC Motorsport CNC Catch Can	1x M6x16mm Button Head Bolt
1x AIRTEC Motorsport Mounting Bracket	1x M6 Washer
1x Pro Hoses Silicone Hose Kit (Two Hoses)	1x M5x16mm Button Head Bolt
1x 45-Degree Push Fit Connector	1x M5 Washer
1x Straight Push Fit Connector	1x M5 Rubber Rivet Nut

Tools Required:

Ratchet and Socket Set	Allen Key Set
Trim Removal Tool or Similar	Hose Clamp Pliers


PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:

1. Start by removing the engine cover by pulling it off the rubber mounts. Please note, our car is fitted with the AIRTEC Motorsport engine cover secured with three 5mm Allen Key bolts.




2. Use a trim removal tool or similar to undo the seven plastic push fits holding the plastic slam panel in place and remove.

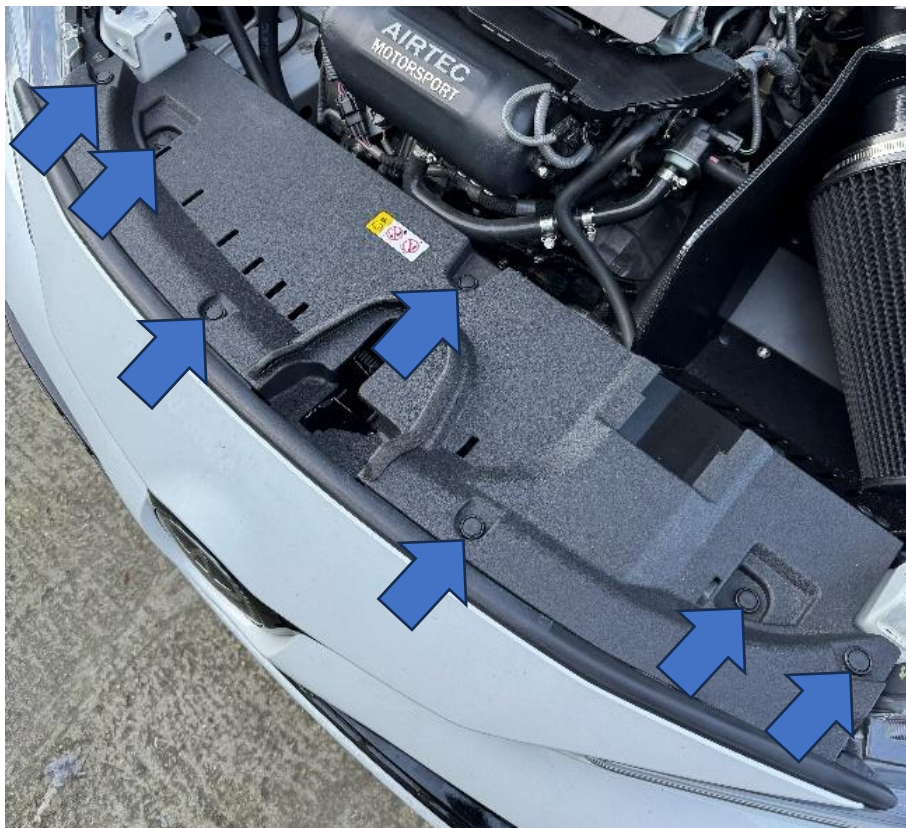

3. Install the mounting bracket onto the catch can, as shown.



4. Locate the 10mm nut on the slam panel and remove (blue arrow). Then install the M5 rubber Rivet Nut supplied in the kit into the spare hole above it (orange arrow) and secure the catch can in place using the provided M6 Button Head bolt at the bottom and M5 Button Head bolt in the Rivet Nut.

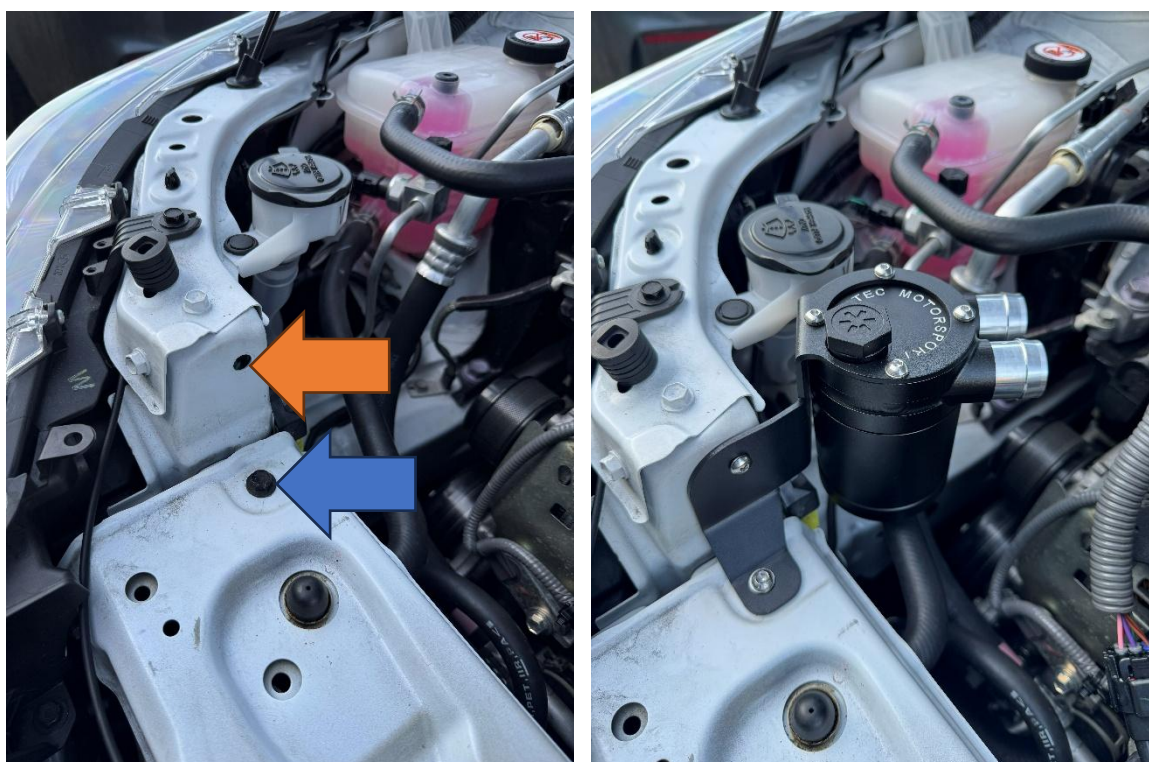

5. Locate the original breather hose on top of the engine and release the clamps to remove it.



6. Install the straight connector supplied in the kit onto the left-hand side of the catch can and the remaining 45-degree connector onto the right-hand side of the catch can and install.

You can then route the hoses as shown, with the straight hose going to the left-hand side and the hose with the 90-degree end to the right-hand side. Secure in place with the jubilee clips provided.



7. Finally, check everything is tight and secure and refit the plastic slam panel trim and engine cover.

