

Vehicle:	Ford Fiesta ST Mk8
Product:	Under Tray
Part number:	ATMSFO189

**Kit Contents:**

1x AIRTEC Motorsport Undertray	2x M5 x 18mm Washer
2x M5 Rivnuts	2x M5 x 16mm Hexagon Socket Cap Bolt


Tools Required:

T30 Torx Socket and Ratchet	Rivnut Tool
4mm Allen Key	Drill and 7mm Drill Bit


PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:

1. To start, undo the six T30 screws securing the original under tray (four at the front, two at the back). The undertray can then be removed.

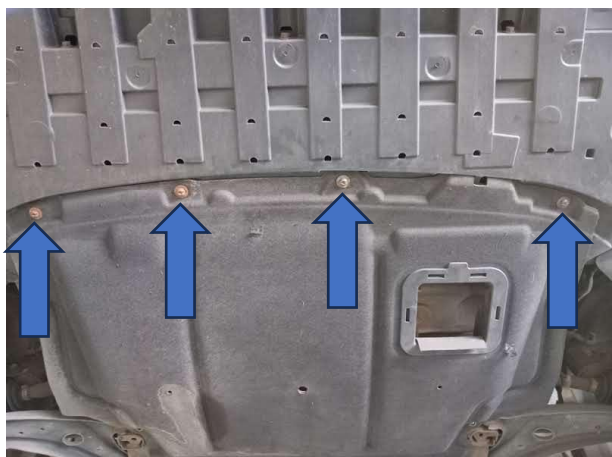

2. Now locate the two holes in the car's subframe, as shown. These need to be drilled out to 7mm for your new AIRTEC Motorsport under tray to attach securely.

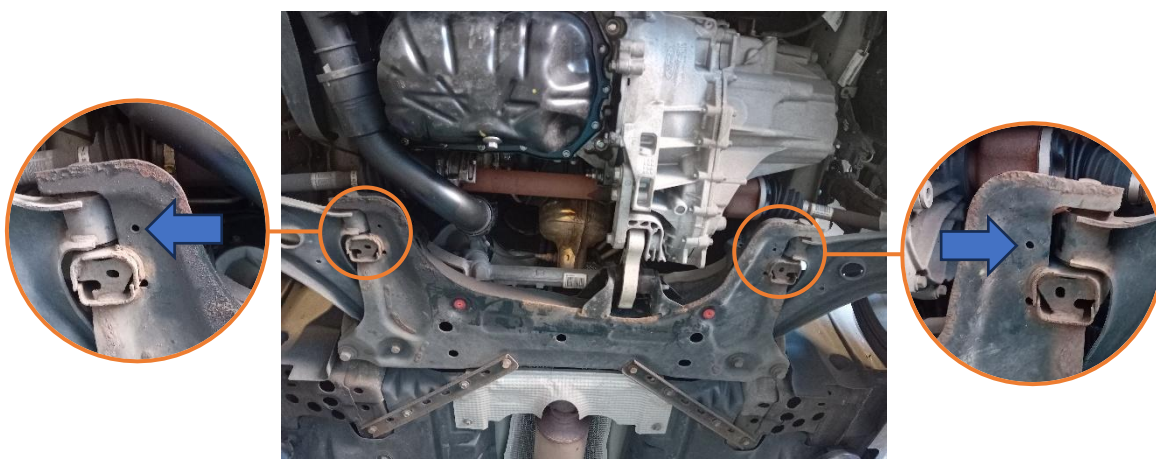


3. Install the two Rivnuts supplied in the kit into the drilled holes.



4. You can now install the AIRTEC Motorsport under tray by inserting the long bracket at the front into the slot in the back of the bumper (highlighted red). This will allow you to hold the tray up with one hand.

Then reinstall the two T30 screws at the back of the tray to hold it in place (blue arrows). Secure the front of the under tray by refitting the four T30 screws (orange arrows) and then fit M5 bolts and washers provided in the kit to secure the under tray's middle brackets to the Rivnuts installed in Step 3 (green arrows).

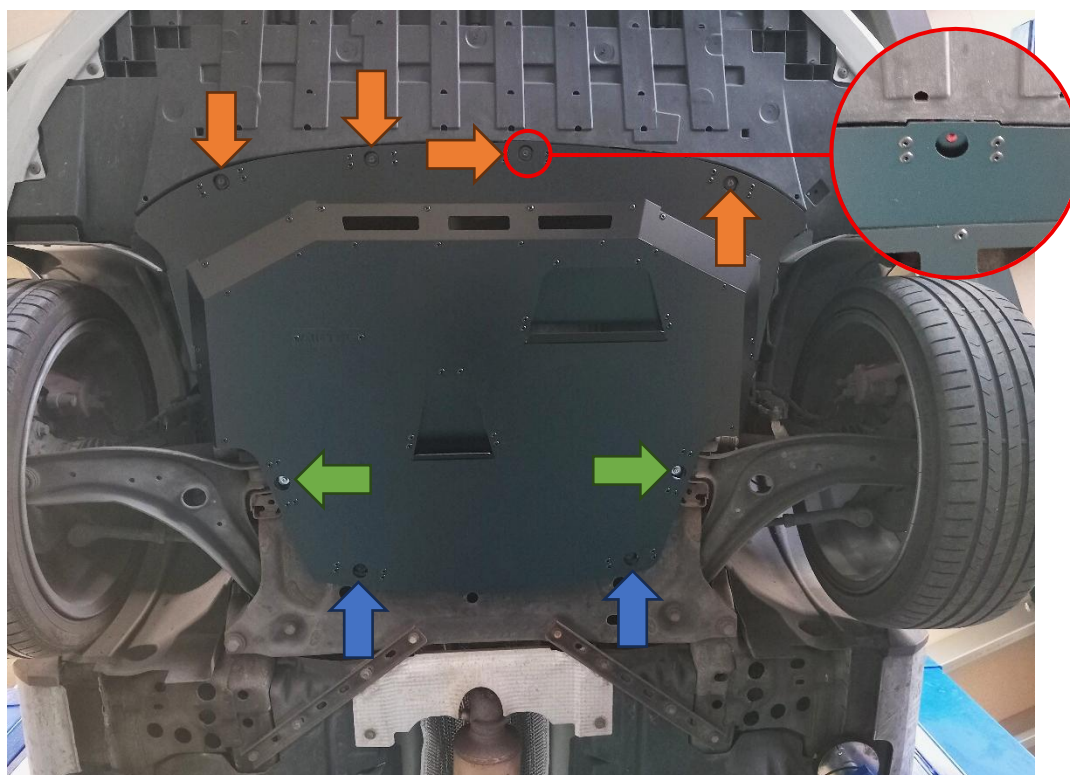

5. Finally, check that all fixings are tight and that the tray is secure.

