

AIRTEC MOTORSPORT Fitting Instructions

Vehicle:	Toyota Yaris GR
Product:	Rear Differential Cooling Guide
Part number:	ATMSYGR07



Kit Contents:

1x AIRTEC Rear Differential Cooling Guide	3x M6x20mm Mudguard Washers
1x M6x20mm Socket Head Bolt	1x M6 Nyloc Nut
1x M6x80mm Socket Head Bolt	

Tools Required:

Ratchet and Socket Set	5mm Allen Key
10mm Spanner	


PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:

1. Start by locating the mounting points for the cooling guide. One will be a threaded tab and the other a slot in the rear subframe, as shown below.



2. Now install the cooling guide by securing the front in place using the provided M6x20mm Socket Head bolt with a washer. Do not fully tighten yet as you will need some movement to align the rear.

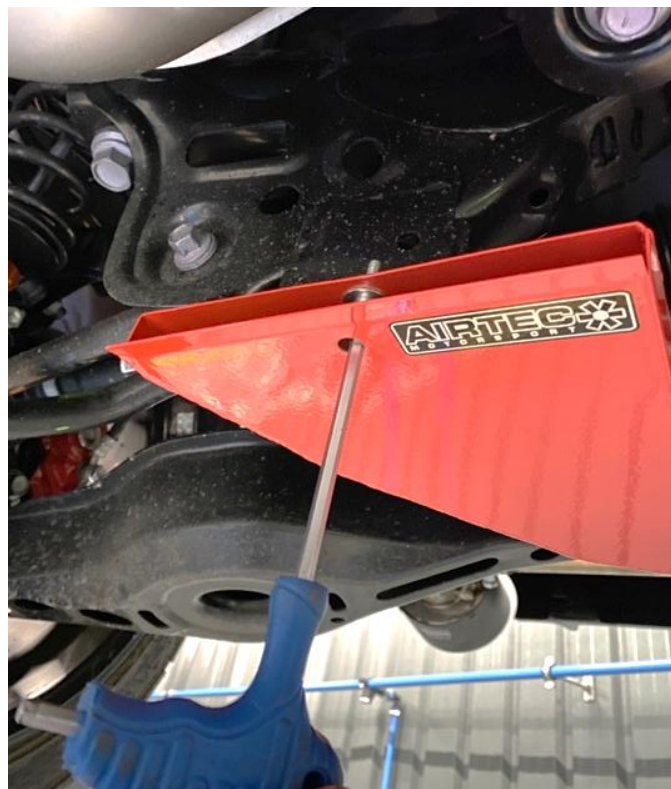

3. Lastly, install the M6x80mm Socket Head bolt with a washer through the slot in the rear subframe, to the cooling guide and add an additional washer with M6 Nyloc Nut to secure it in place. Once happy with the fitment, fully tighten all fixings securely.

