

<b>Vehicle:</b>	BMW G8X M2/3/4
<b>Product:</b>	Auxiliary Radiator
<b>Part number:</b>	ATRADBBMW9

**Kit Contents:**

1x AIRTEC Motorsport Radiator	1x Mesh Guard
-------------------------------	---------------


**Tools Required:**

Ratchet and Socket Set	Replacement Coolant
Pick Tool or Small Flat-Blade Screwdriver	


**PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT**

# Instructions:

1. Start by removing the front wheels and then remove the wheel arch liners by releasing the 13 10mm screws on either side.

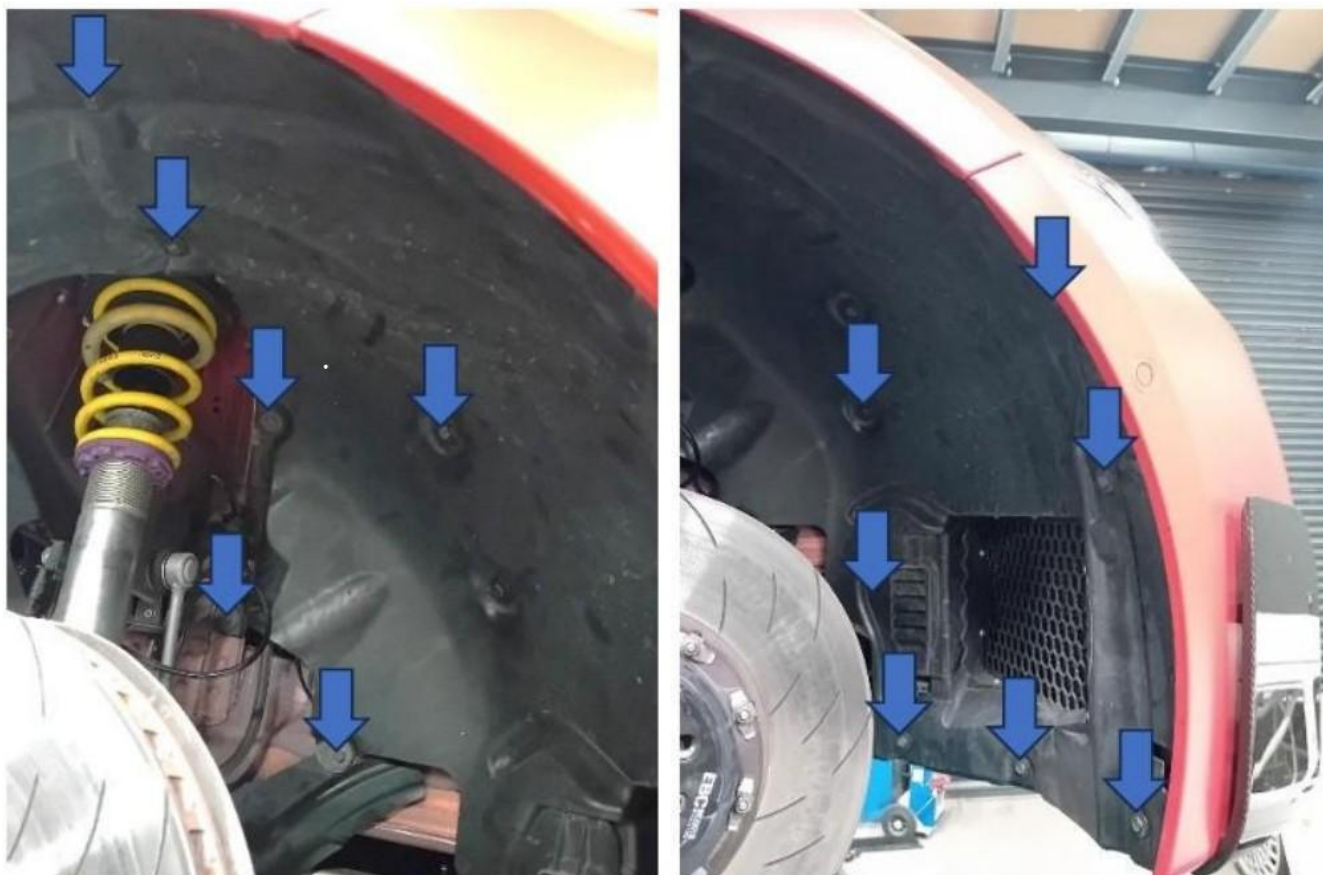

2. Remove the two 13mm and one 10mm bolt holding the top bracket on and remove.

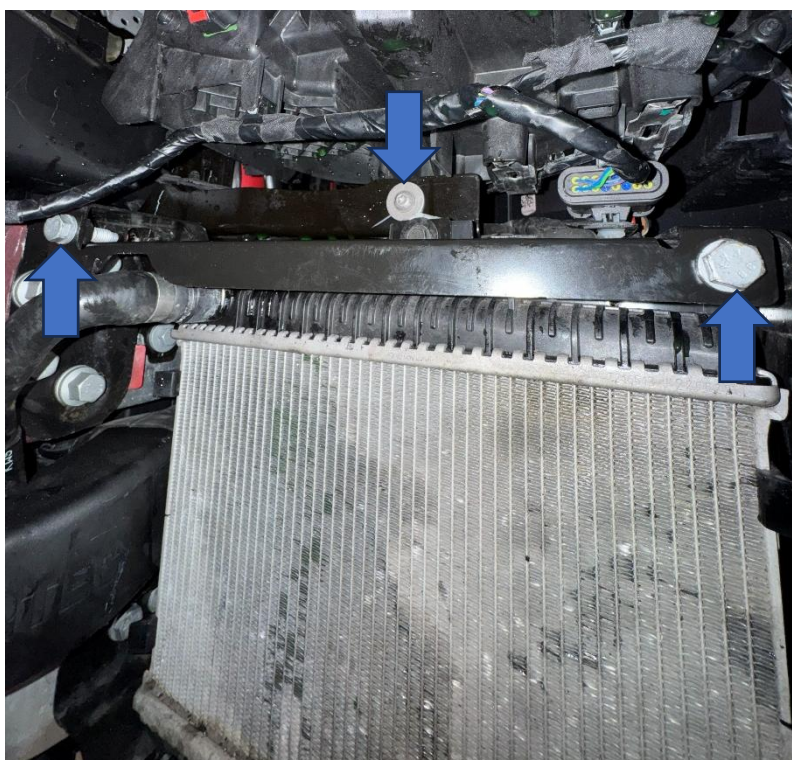

3. The radiator can then be tilted backwards and then upwards to remove from the lower rubbers **but DO NOT disconnect the coolant hoses yet**. You can then position the new radiator in place and reinstall the bracket in reverse of removal.



4. With the new radiator in place, swap the hoses one by one starting with the bottom. Use a small pick tool or similar to lift the hose connector securing clip and then pull the hose off to release it. To reinstall, close the securing clip first and then push the hose onto the fitting until you hear it click. Repeat for the other hose.  
**Please note:** Be ready to catch any spilt fluid from the radiator and hoses as you disconnect them.



5. Finally, top up the coolant and as necessary and bleed the system following manufacturer guidelines. You can then reinstall the arch liner in reverse of removal.