

AIRTEC Fitting Instructions

Vehicle:	Ford Fiesta Mk7 incl. ST180
Product:	Rear Wing Spoiler
Part number:	ATMSFO106



Kit Contents:

1x AIRTEC Motorsport Centre Blade	6x M6x16mm Button Head Bolts
2x AIRTEC Motorsport Upright Brackets (Sided)	4x M6x12mm Button Head Bolts
2x AIRTEC Motorsport End Plates (Sided)	2x M6x20mm Button Head Bolts
1x Wing Spoiler Drill Location Templates	16x M6 Pan Washers
8x M6 Nyloc Nuts	

Tools Required:

Drill and 3mm/6.2mm/14mm Drill Bits	5mm Allen Key
10mm Spanner	Centre Punch

Notes:

We endeavour to deliver an extremely high-quality product but due to the handmade manufacturing process there is the possibility of minor imperfection(s) on the centre wing blade, prepping and painting is recommended before fitting


We recommend that this item is fitted by a competent professional to prevent any damage to the vehicle

A fitting video can be found here: [AIRTEC MOTORSPORT REAR WING FOR FIESTA MK7](#)

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:

1. To ensure the correct bolts are used in the right places, use the diagram below as a reference.

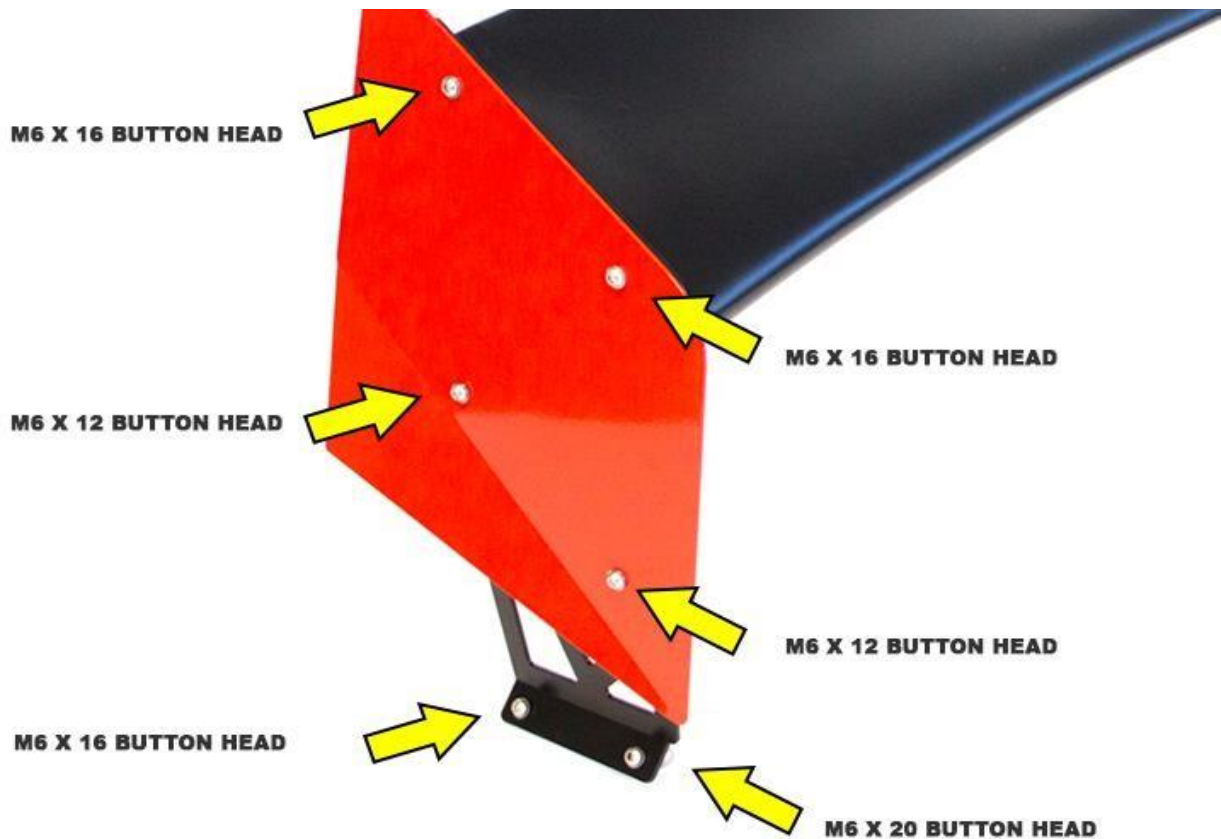

2. Start by placing the end plate over the correctly sided upright bracket and bolt through to the centre blade using two M6x16mm Button Head bolts with washers. Then secure the lower end plate holes to the upright bracket using two M6x12mm Button Head bolts and Nyloc nuts with washers, as shown.



3. Next carefully mark out the locations of the mounting holes to drill the boot lid using the templates provided in the kit.

Please note: We recommend using a centre punch to mark the holes before drilling. This will prevent slipping and damaging the boot lid when drilling. It is also advised to use masking tape on the boot lid to prevent risk of scratching.



4. Once the hole locations are marked, drill the holes using a 3mm drill bit and then out to 6.2mm.



5. With the help of a second person holding the spoiler, you can now secure the upright brackets to the boot lid with the M6x16 and M6x20mm bolts with Nyloc nuts and washers provided.

To gain access and tighten the nut on the double skin area of the boot lid, you will need to drill a hole using a 14mm drill bit, as shown.



7. Finally, once both sides are in place, double check that all bolts are tight.

