

Vehicle:	BMW x40i
Product:	Auxiliary Radiator
Part number:	ATMSBMW37

**Kit Contents:**

1x AIRTEC Motorsport Auxiliary Radiator	
---	--

Tools Required:

<ul style="list-style-type: none">• Ratchet with 8mm Socket• Small Pick Tool or Similar	<ul style="list-style-type: none">• Flat-Blade Screwdriver• Coolant (to top up system)
--	---


PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:


1. Working in the left-hand wheel arch (when looking at the vehicle from the front), remove the nine 8mm bolts securing the arch liner in place and remove.



2. Using a flat-blade screwdriver, lift the two clips securing the top of the radiator in place. Then lift the radiator backwards and up to release it **but DO NOT disconnect the coolant hoses yet.**

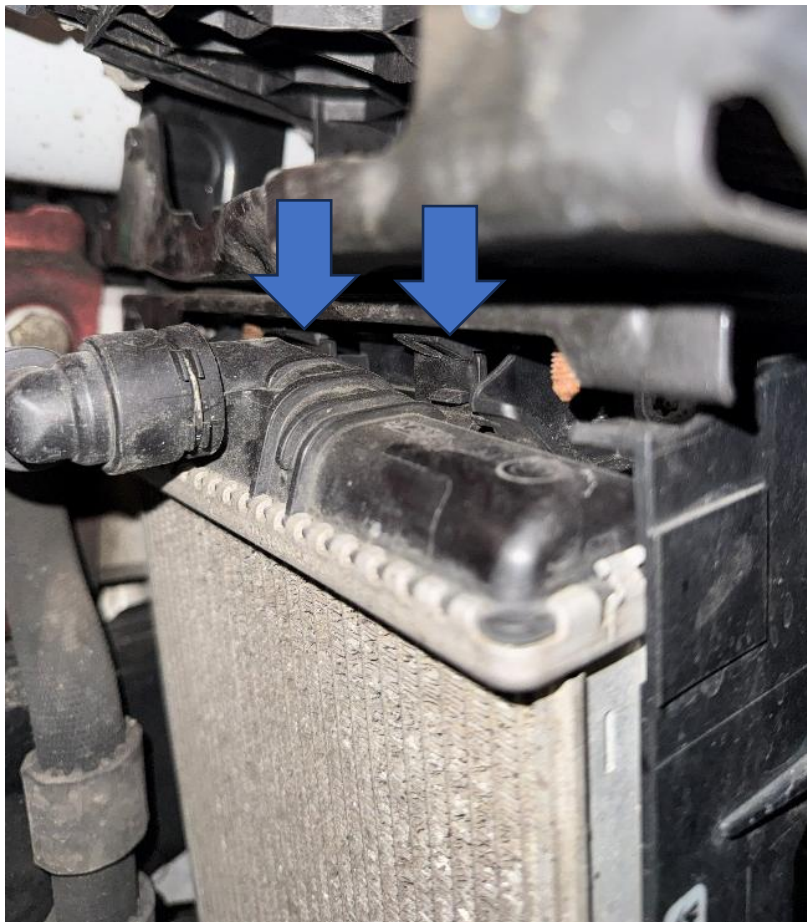

3. Install your new AIRTEC Motorsport auxiliary radiator by locating it correctly at the bottom and then pushing it so the top clips click in place.

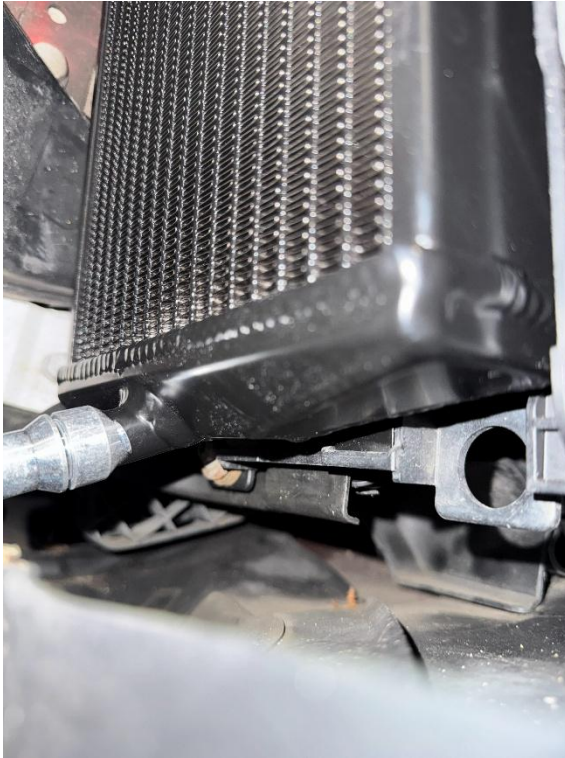

4. With the new radiator in place, swap the hoses one by one starting with the bottom. Use a small pick tool or similar to lift the hose connector securing clip, and then pull the hose off to release it. To reinstall, **close the securing clip first** and then push the hose onto the fitting until you hear it click. Repeat for the other hose.



5. Finally, top up the coolant and as necessary and bleed the system following manufacturer guidelines. You can then reinstall the arch liner in reverse of removal.