

# AIRTEC MOTORSPORT Fitting Instructions

|                     |                 |
|---------------------|-----------------|
| <b>Vehicle:</b>     | Toyota Yaris GR |
| <b>Product:</b>     | Quick Shift     |
| <b>Part number:</b> | ATMSYGR05       |



## Kit Contents:

|                                  |            |
|----------------------------------|------------|
| 1x AIRTEC Motorsport Quick Shift | 2x Washers |
| 4x M5x20 Socket Head Bolts       |            |

## Tools Required:

|                        |                        |
|------------------------|------------------------|
| Ratchet and Socket Set | Flat-Blade Screwdriver |
| Torx Sockets           | Philips Screwdriver    |
| Trim Removal tool      | 4mm Allen Key          |

**PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT**

# Instructions:

1. Start by undoing the two Philips screws securing the MAF sensor in place then remove it.



2. Loosen the jubilee clip using a 10mm socket that secures the intake pipe and then pull the pipework away from the air box.




3. On the air guide at the front, release the two trim clips and then carefully remove it from the car.




4. Unplug the vacuum line from the front of the air box and then unclip the line from it.





5. Unclip the wiring harness from the side of the air box and then unplug it from the front.

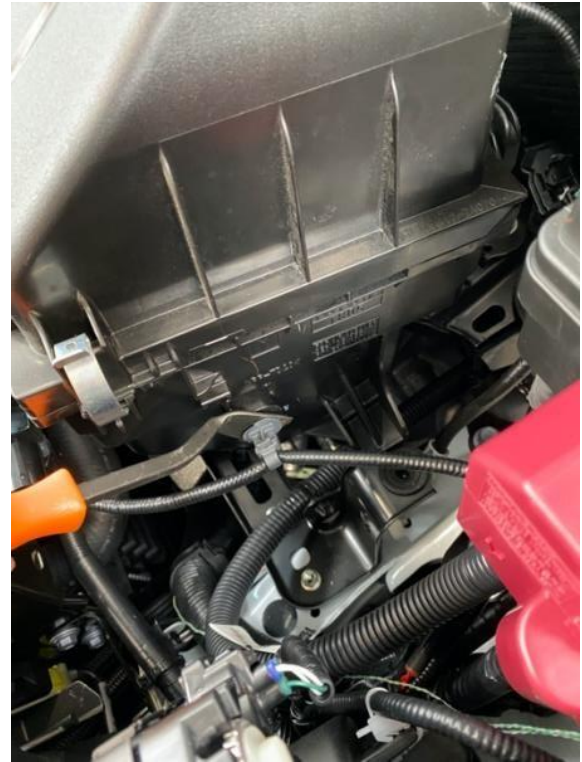

6. You can now remove the air box by lifting it from its rubber mounts underneath.

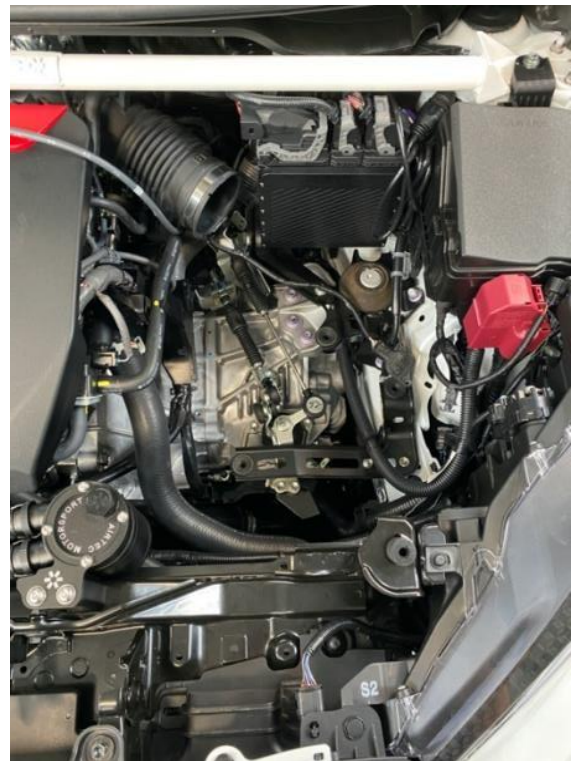

7. Remove the spring clip securing the gear linkage in place by releasing the pressure inside using a flat-blade screwdriver, as shown. You can then pull the linkage up and off.

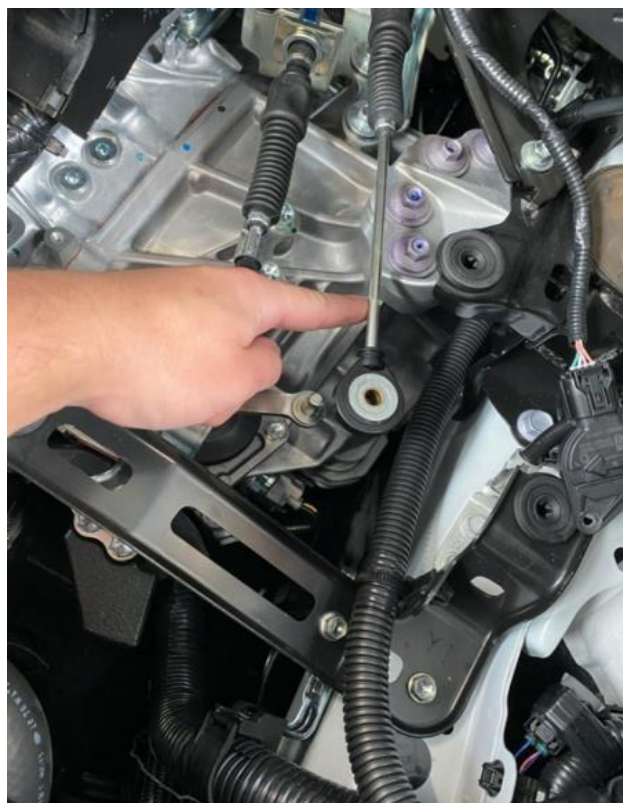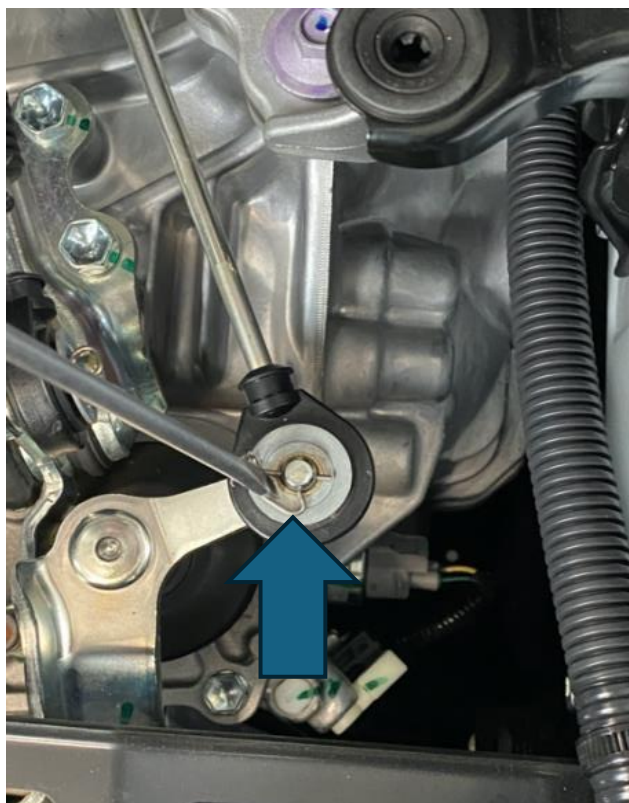

8. Now install the supplied washer onto the pin on the underside of the AIRTEC Motorsport quick shift.



9. Install the remaining washer supplied in the kit on the other side of the gear linkage and then secure by reinstalling the original spring clip, as shown.



10. Finally, install the other part of the quick shifter on top of the original pin, as shown. Then align both parts of the shifter and secure together using the supplied four bolts provided.

