

AIRTEC MOTORSPORT Fitting Instructions

Vehicle:	Toyota Yaris GR
Product:	Carbon Fibre Front Air Feed
Part number:	ATMSYGR11



Kit Contents:

1x AIRTEC Motorsport Carbon Fibre Air Feed	3x M6 Nyloc Nuts
1x Mounting Bracket	3x M6x16mm Button Head Bolts
1x Foam Strip	6x M6 Pan Washers

Tools Required:

Ratchet and Socket Set	Allen Key Set
------------------------	---------------


PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:

1. Start by sticking the supplied foam piece in place where the original air feed was located.



2. Now attach the supplied mounting bracket onto the air feed using the two M6 bolts with four washers and two Nyloc nuts provided. Make sure that the bracket is secured the correct way, as shown.

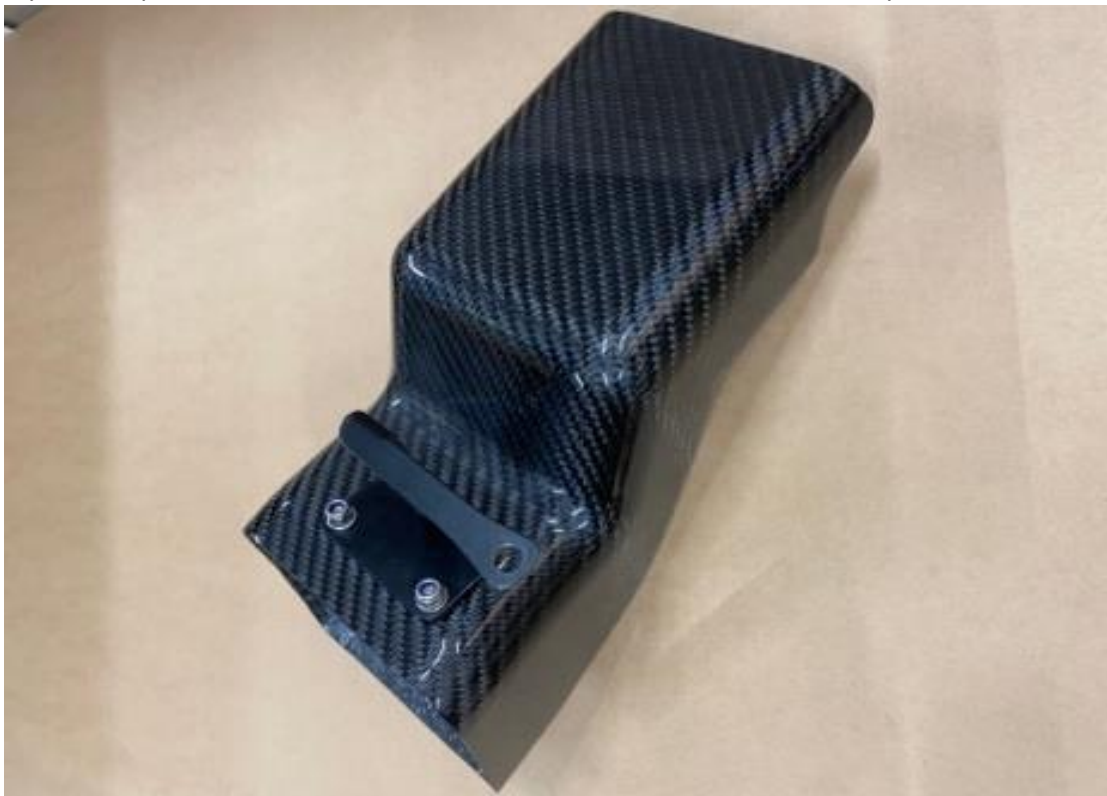

3. Finally, locate the hole in the slam panel as shown and align the bracket to it. Then secure in place using the provided M6 bolt with a Nyloc nut and washers.

