

AIRTEC MOTORSPORT Fitting Instructions

Vehicle:	Toyota Yaris GR
Product:	Torque Mount
Part number:	ATMSYGR01



Kit Contents:

1x AIRTEC Motorsport Torque Mount	1x Metal Bush Insert
1x Polyurethane Bush Set	1x Replacement Bolt

Tools Required:

Access to a ramp or a jack and axle stands	Trim removal tool
Ratchet and Socket Set	


PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions

1. From underneath the car, remove the undertray by undoing the four 10mm bolts attaching it to the bumper, followed by the four 10mm bolts (blue arrows) further back. Then work round removing the 12 plastic clips (orange arrows) situated around the undertray using a trim removal tool.



2. Locate the torque mount at the back of the engine and undo the two 22mm bolts holding it in place.

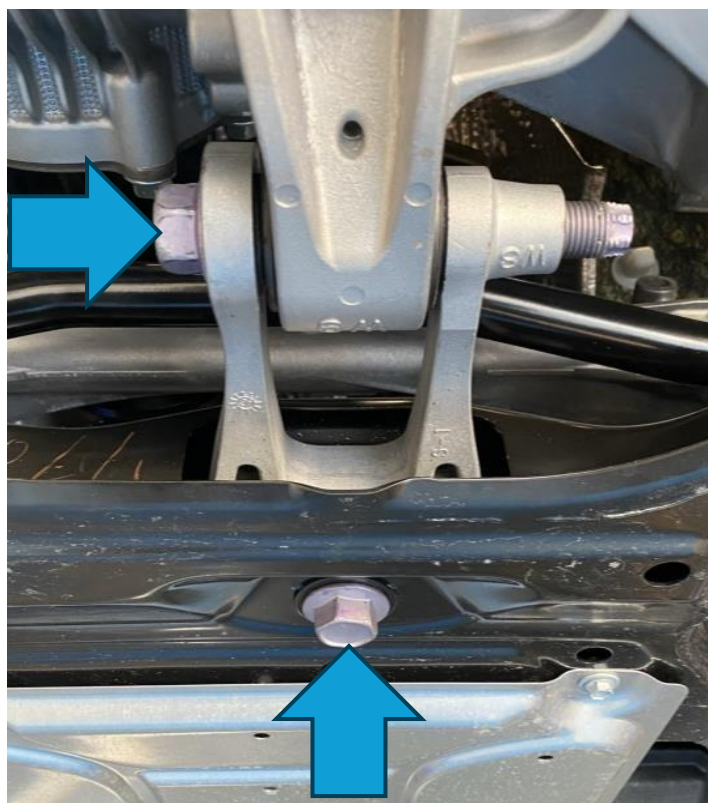

3. Undo the four 14mm bolts holding the mount to the gearbox and remove from the car together with the original torque mount.



4. Install the new torque mount ensuring the insert is seated correctly as shown. Then reinstall reusing the original bolt.



5. Install the mount back to the gearbox reusing the original bolts.



6. Finally, insert the new bolt provided into the torque mount and tighten, then reinstall the undertray.

Please note: You may need to lever the engine back slightly to line the bolt up.

