

AIRTEC MOTORSPORT Fitting Instructions

Vehicle:	Abarth 500/595
Product:	Induction Kit
Part number:	ATIKFT1



Kit Contents:

1x AIRTEC Motorsport Foam Air Filter	2x M5 Nyloc Nuts
1x AIRTEC Motorsport Intake pipe	4x M5x16mm Socket Head Bolts
1x Mounting Bracket	4x M5 Pan Washers
1x Air Intake Scoop	1x M6x16mm Socket Head Bolt
1x Pro Hoses Silicone Hose	1x M6x10mm Socket Head Bolt
1 x 80mm Jubilee Clip	2x M6 Small Mudguard Washers
2x 40mm Jubilee Clips	

Tools Required:

Ratchet and Socket Set	Drill
Trim Removal Tool	70mm Hole Saw


PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:

1. Start by loosening the two clips connected to the air box. If they are 'one use' clips then remove by twisting them, as will be replaced by jubilee clips supplied in the kit.




2. Now remove the 10mm bolt securing the air box and then lift it the rubber mounts securing underneath.

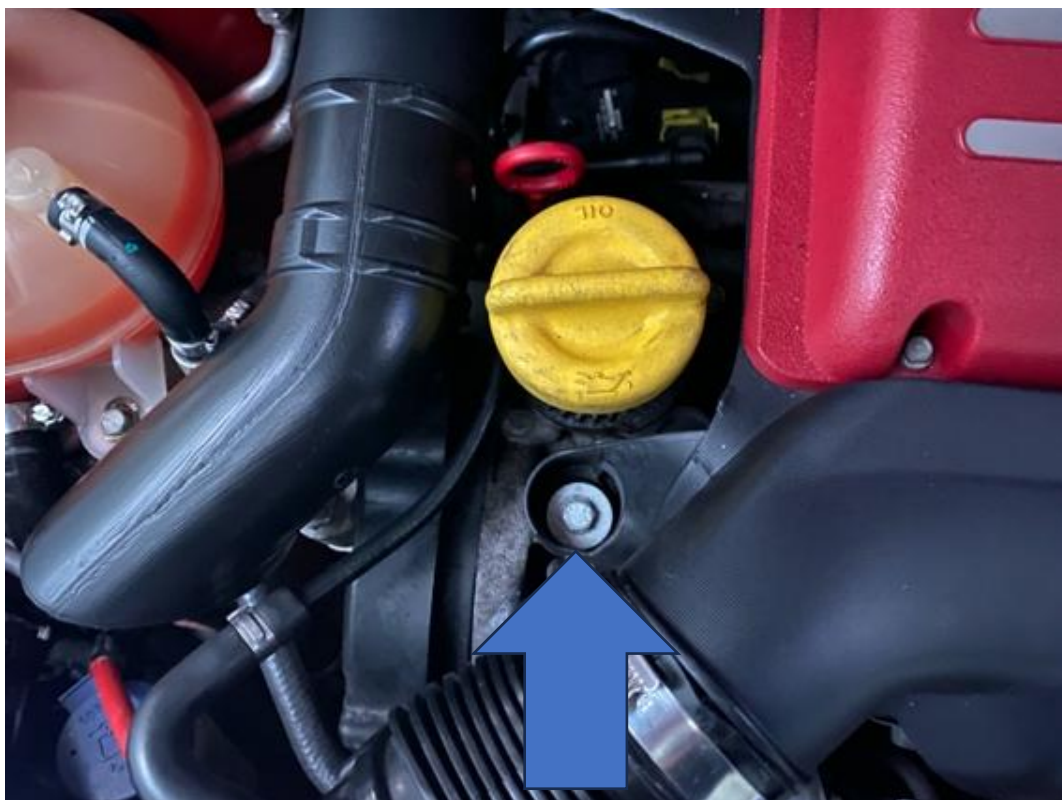

3. Unclip the plastic caps over the windscreen wiper arms to reveal the 13mm nuts and then undo them and remove the wipers.





4. Remove the three plastic trim clips located across the top of the scuttle panel (blue arrow). Then pull the rubber weather seal up and peel it off (orange arrow).

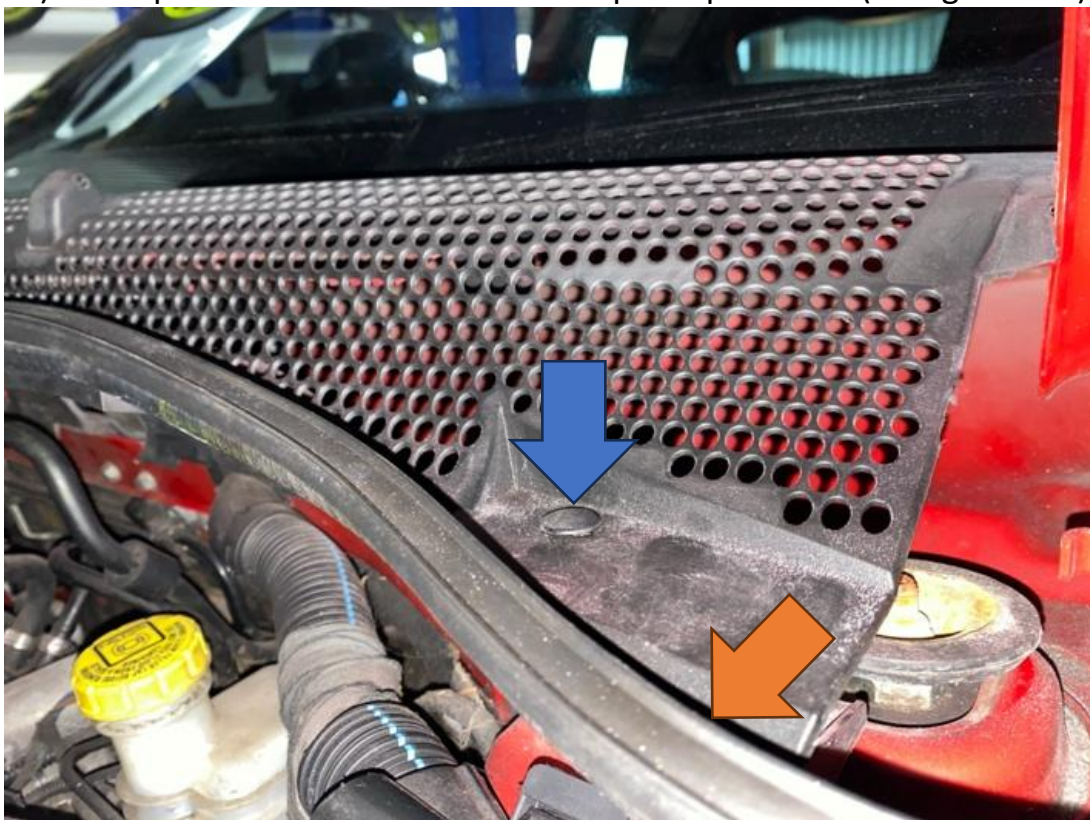

5. You can now lift the scuttle panel off and disconnect the washer jets as you do.



6. Once the scuttle panel has been removed, identify where the AIRTEC Motorsport air scoop supplied in the kit will be located. Secure the scoop with the two M5x12mm bolts, four washers and Nyloc nuts provided. You can then refit the scuttle panel.

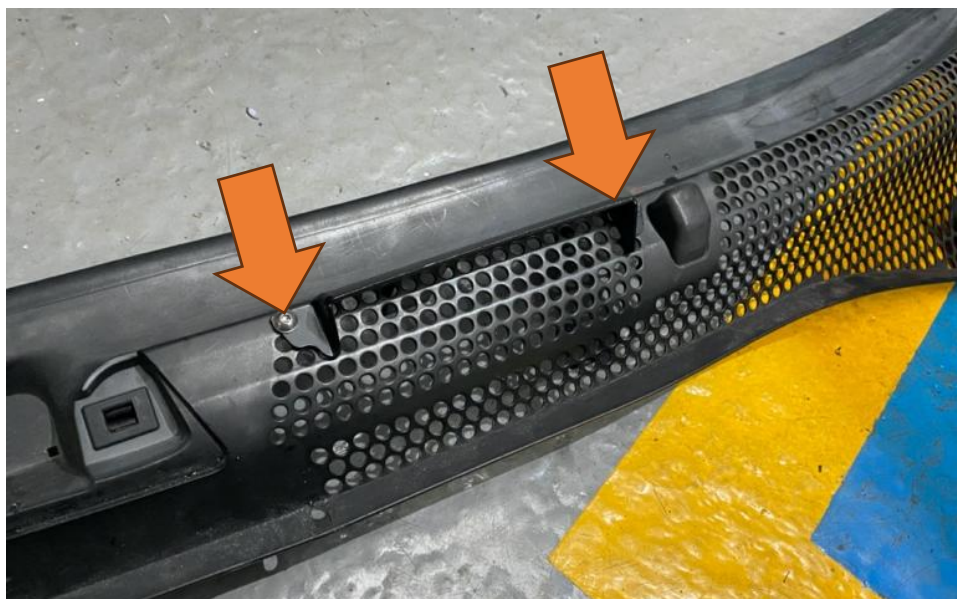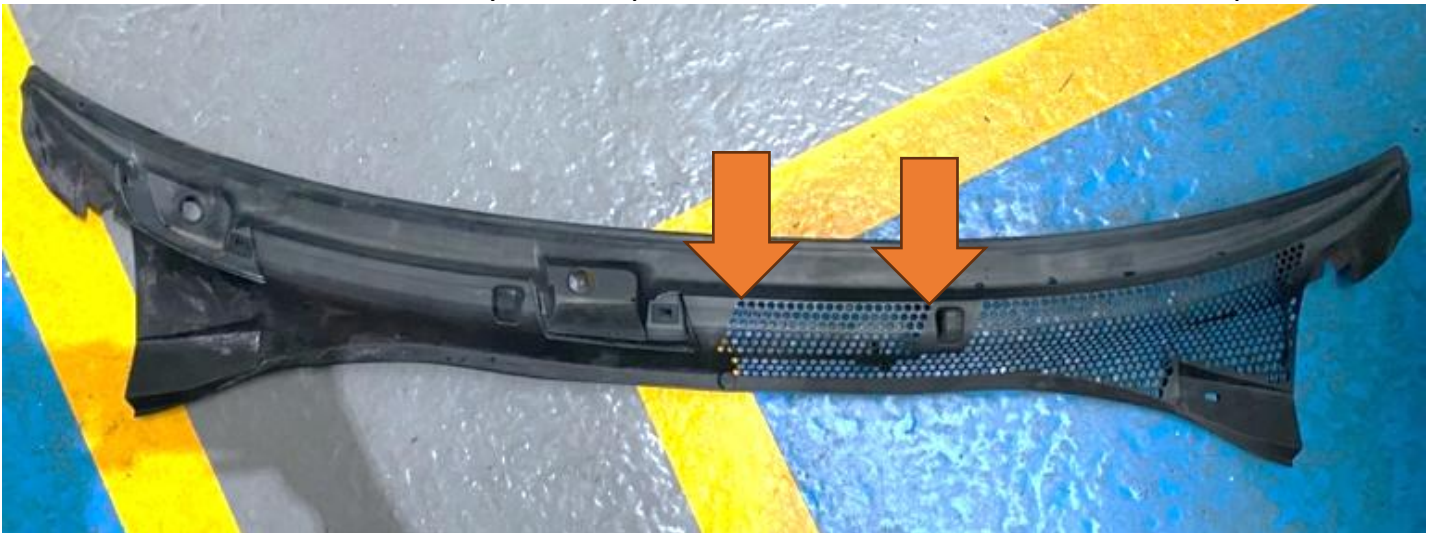

7. Now fit the AIRTEC Motorsport intake pipe supplied in the kit securing with the jubilee clip provided.




8. Connect the Pro Hoses silicone pipe supplied in the kit as shown and secure with the jubilee clips provided.



9. Attach the mounting bracket supplied in the kit to the rear of the intake pipe, as shown. Use the M6x16mm bolt and washer provided to secure the bracket to the cam cover, and use the remaining M6x10mm bolt and washer to attach the bracket to the pipe.



10. You can now install your AIRTEC Motorsport air filter to the intake pipe.

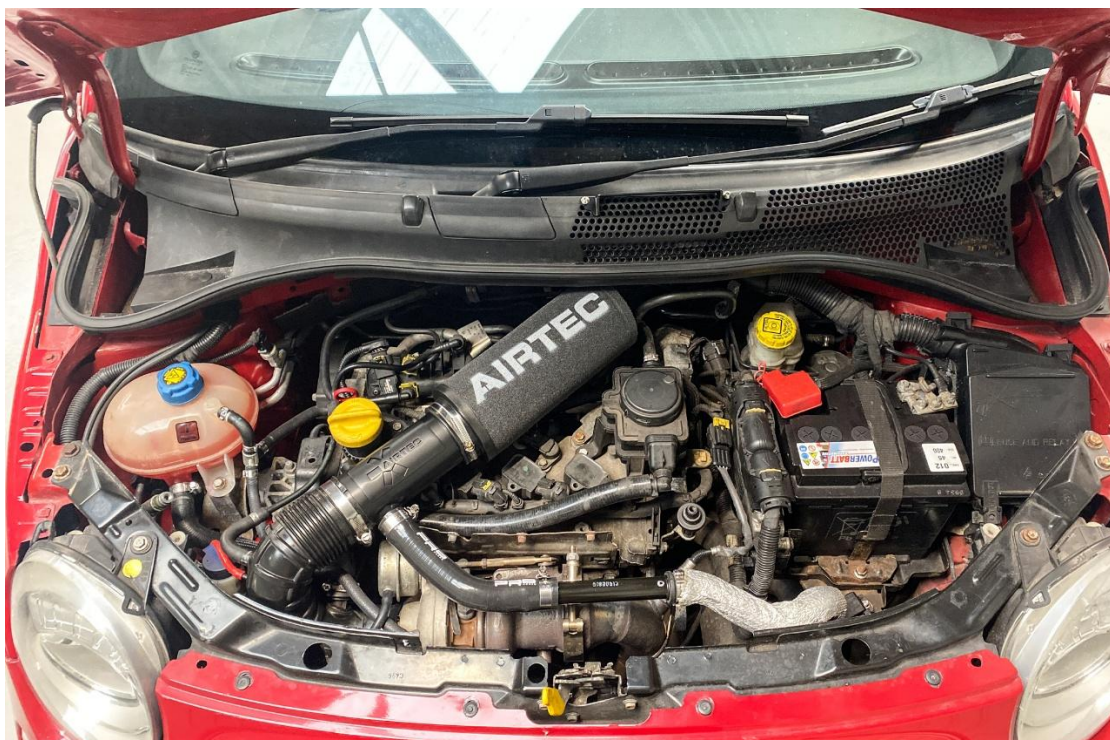

11. Using a 70mm hole saw, carefully drill into the lower plastic scuttle panel directly below the air scoop and in front of the air filter to improve air flow.



12. Finally, check everything is tight and secure.

