

AIRTEC MOTORSPORT Fitting Instructions

Vehicle:	Toyota Corolla GR
Product:	ITCC Scoop
Part number:	ATMSCGR11



Kit Contents:

1x AIRTEC Motorsport ITCC Cooling Guide	2x M5x20mm Washers
2x M5x16mm Button Head Bolts	6x M5 Pan Washers
2x M5x12mm Button Head Bolts	4x M5 Nyloc Nuts



Tools Required:

Marker Pen or Scribe	8mm Spanner
Drill with 5.5mm Drill Bit	3mm Allen Key

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:


1. First locate the duct in position by slotting its locating pin into the empty hole in the car's under tray section (blue arrow). Once in place, use a pen or scribe to mark the four drilling locations (orange arrows).

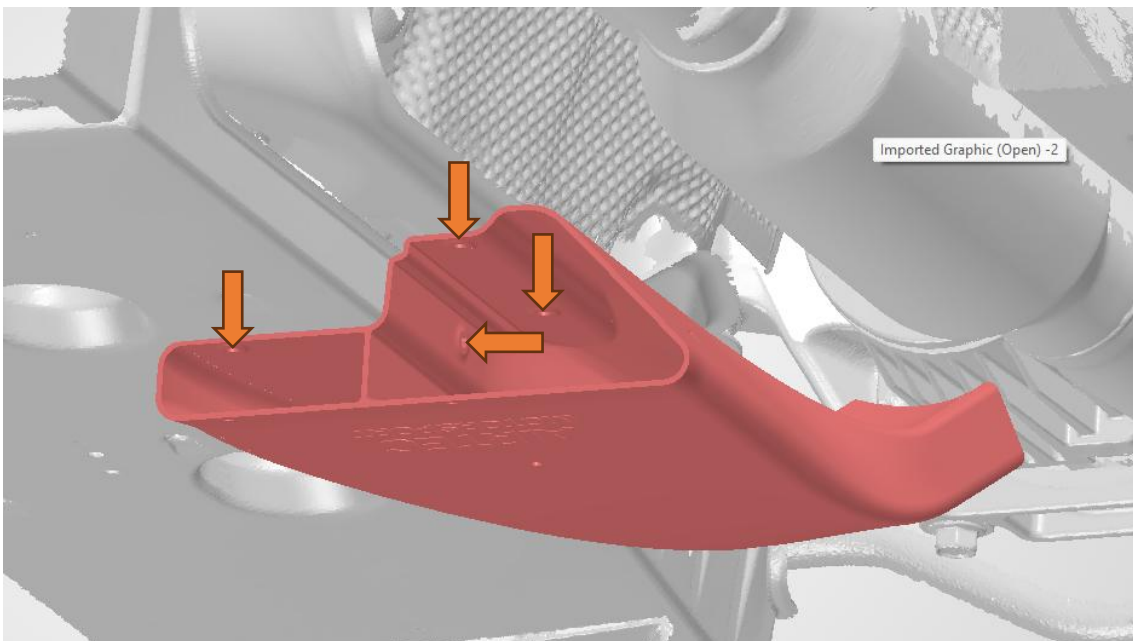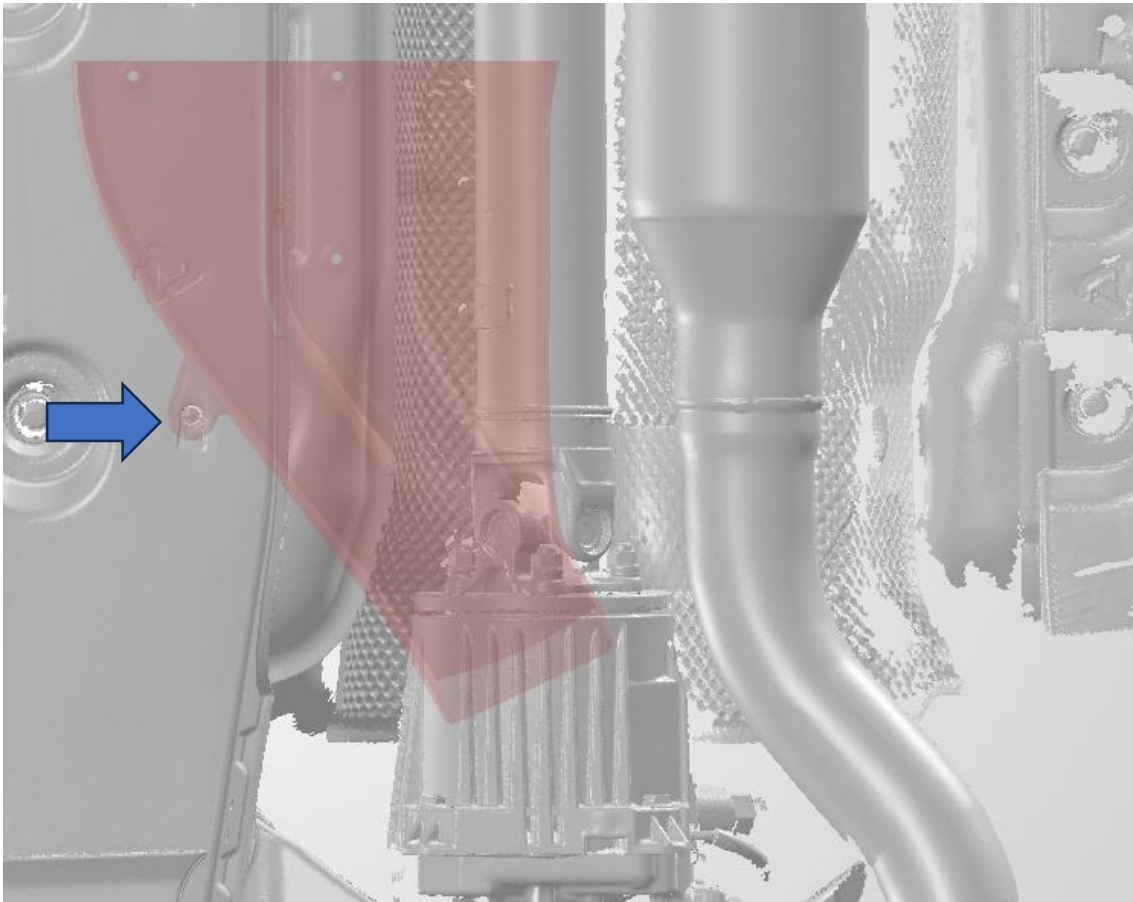

2. Next take a drill and 5.5/6mm drill bit and drill out the marked locations in the previous step. There should be two holes in the black plastic under tray and two in the silver aluminium under tray.



3. Now undo the rear bolt and push fitting securing the black under tray to allow access to the underside.

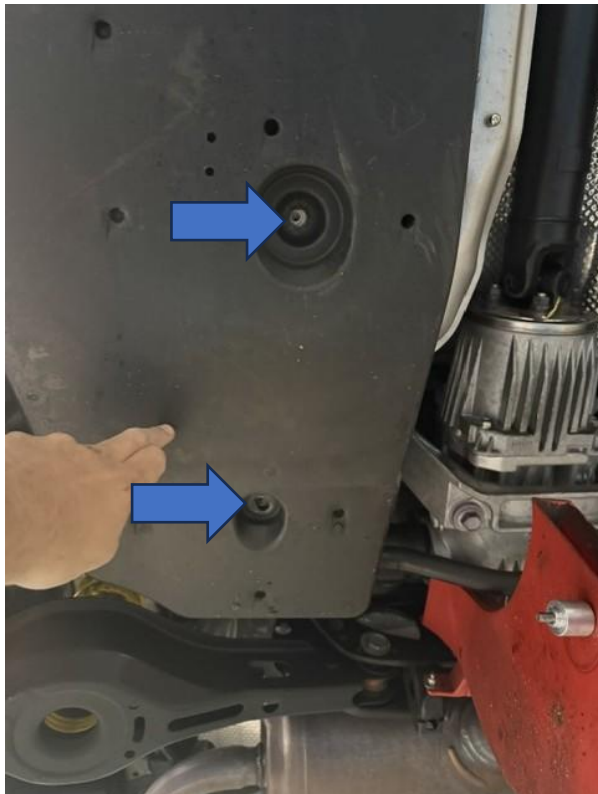

4. For the two that go through the black under tray, use the supplied M5x16mm bolts with small washers and Nyloc nuts with large washers on the other side, as shown.



5. Finally, reinstall the black under tray and then secure the two remaining M5x12mm bolts with washers and Nyloc nuts.

