

AIRTEC MOTORSPORT Fitting Instructions

Vehicle:	EA888 Gen 3 and 4 Platform
Product:	Enclosed Induction Kit Fitting
Part number:	ATIKVAG7



Kit Contents:

Four-piece AIRTEC Motorsport Air Box	8x M6 Nyloc Nuts
1x AIRTEC Motorsport Air Filter	8x M6x16mm Button Bolts
1x AIRTEC Motorsport Cold Air Feed	16x M6 Pan Washers
1x AIRTEC Motorsport MAF Pipe	2x Rubber Trims
1x Pro Hoses Silicone Hose	2x Jubilee Clips
15x Plastic Push Fittings	1x Rubber Grommet

Tools Required:

Ratchet and Socket Set	Phillips Screwdriver
T20 Torx Socket	Hose Clamp Pliers
Hose Clamp Driver or Flat-Blade Screwdriver	

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT

Instructions:



1. Start by releasing the clamp securing the intake hose to the air box by using a hose clamp removal tool and then disconnect it.




2. Remove the vacuum line from the air box by simply pulling it. Then lift the air box up and out of the engine bay, and place aside.




3. Locate the small coolant line on top of the radiator hose and remove it by releasing the hose clamps at both ends.

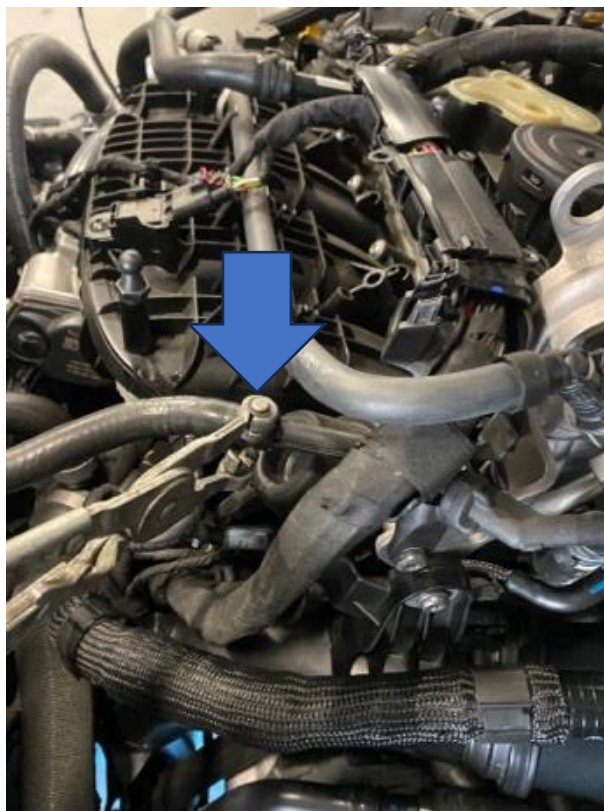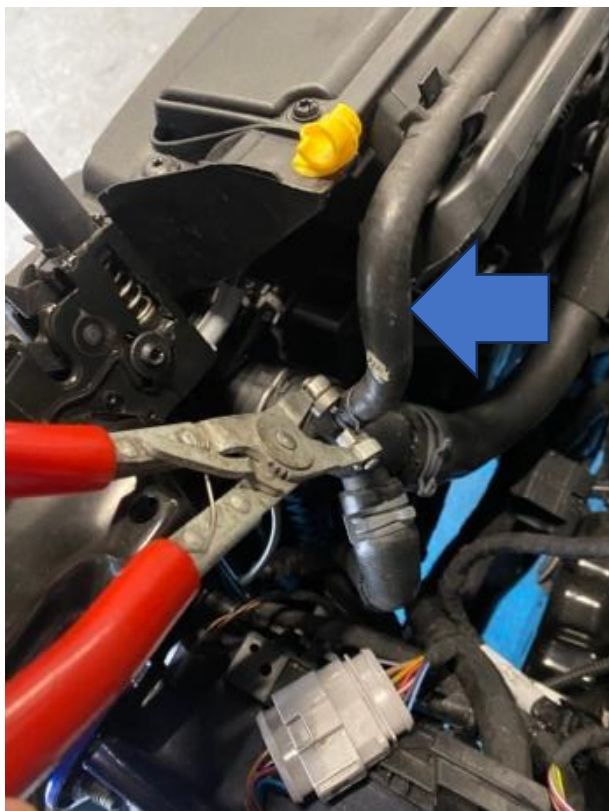

4. Now install the replacement hose supplied in the kit as shown using the jubilee clips provided and tighten securely.

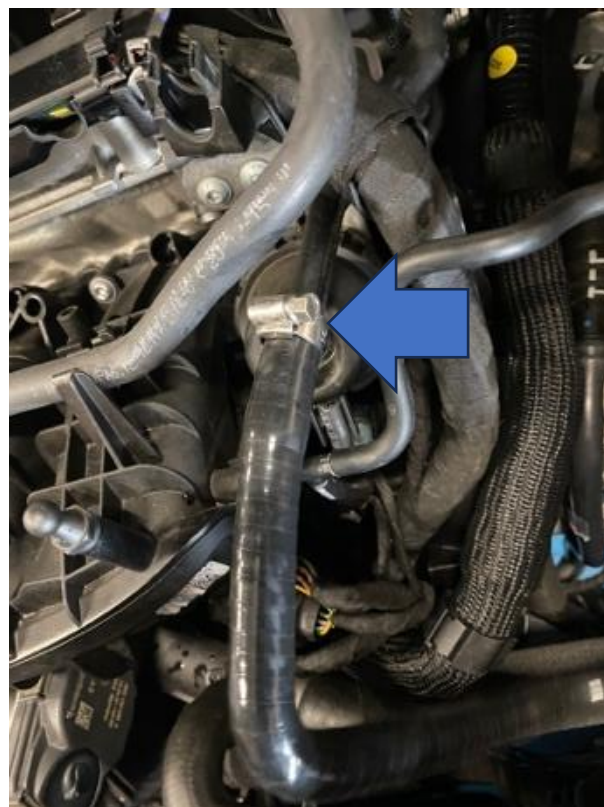

5. The original air feed to the air box can be removed by releasing the two T20 Torx bolts from the top of either side of the air feed.

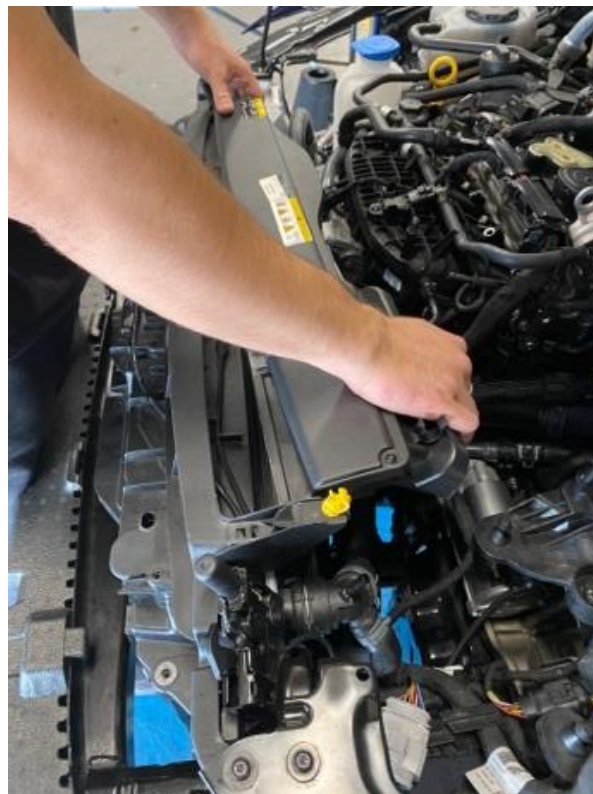


6. Now install the AIRTEC Motorsport air feed by aligning it with the original mounting points. Once in place, secure using the two plastic push fittings supplied in the kit, as shown.



7. Fit the rubber mount onto the underside of the AIRTEC Motorsport air box, as shown. Then attach the air box onto the original mounting points and use three plastic push fittings to fix the air feed to the air box.



8. The intake pipework can now be placed into the air box and the filter installed onto the pipework, as shown. The vacuum line can also be reconnected to the.

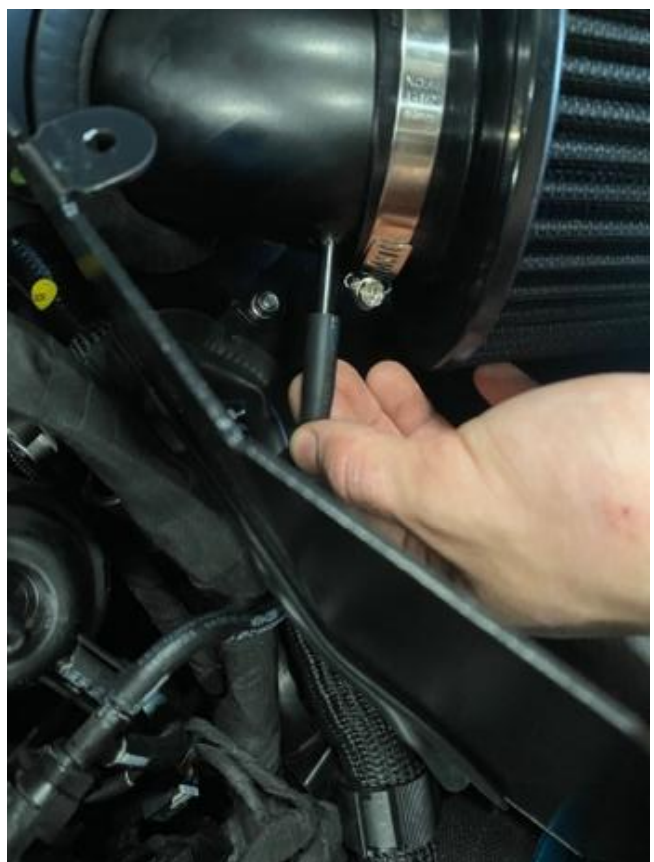

9. Install the air box lid using 10 of the trim clips supplied and then reinstall the original intake hose and secure by reusing the original hose clamp.



10. Finally, make sure everything is tight and secure.

