

KIA CEED GT HOT SIDE/DE-RES PIPE FITTING INSTRUCTIONS

Tools needed:

- Ratchet and Socket set
- Jubilee flexi-driver or flat-bladed screwdriver
- Pliers or grips

Kit Includes:


- 2x AIRTEC Motorsport hard pipes
- 2x Pro Hoses silicone hoses
- 2x Pipe Brackets
- 4x 80mm Jubilee Clips
- 2x M6x16mm Hex Head bolts
- 2x M6 Pan Washers

PLEASE THOROUGHLY READ THESE INSTRUCTIONS AND MAKE SURE YOU ARE FAMILIAR WITH THE STEPS BEFORE CARRYING THEM OUT




Instructions


1. Working from underneath the car, start by undoing the jubilee clip holding the existing Pro Hoses silicone hose to the standard boost pipe.

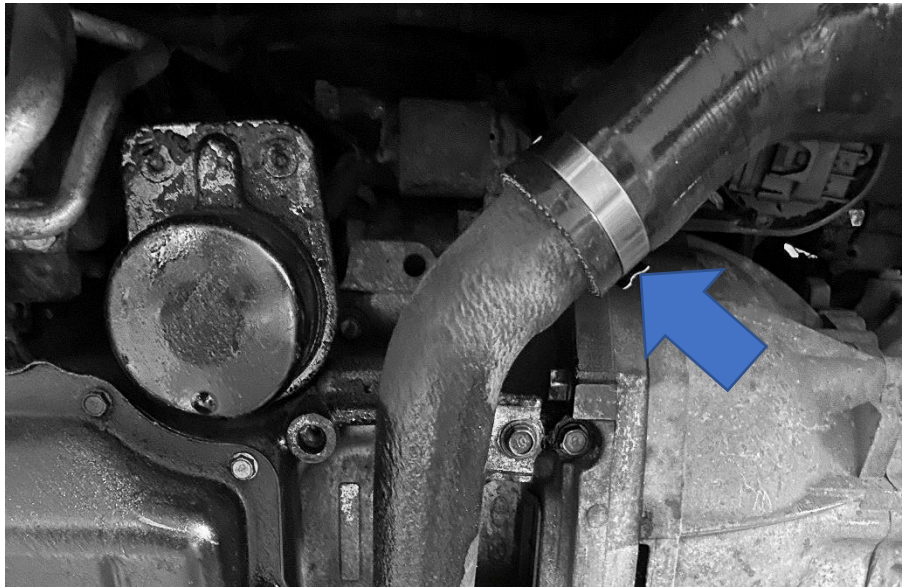

2. Locate the boost pipe coming from the turbo and release the hose clip. You may need to remove a cap over the end of the clip using a pair of pliers or grips to pull it off.

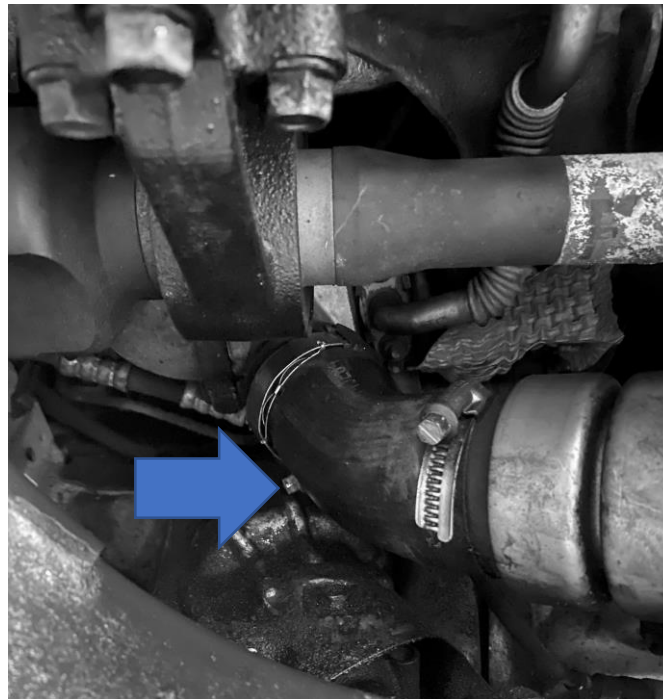

3. Undo the two 12mm bolts holding the original pipework to the car and then remove the whole assembly.

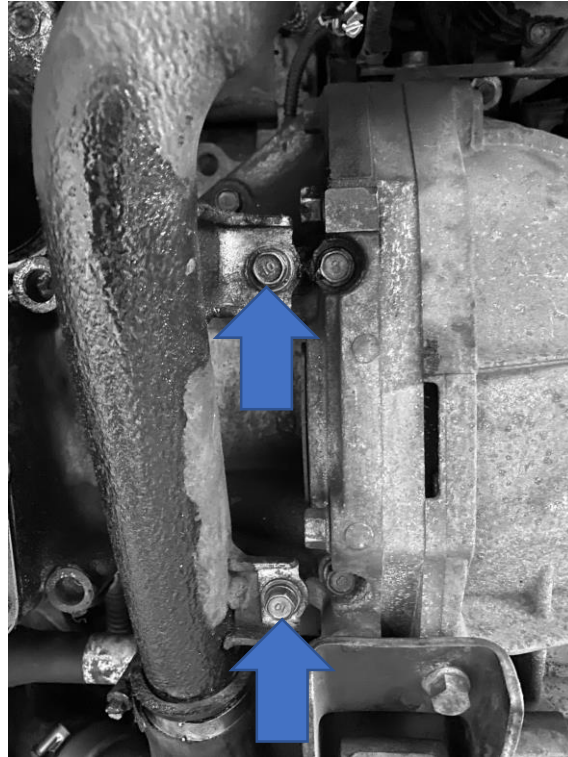

4. Remove the existing Pro Hoses silicone hose and then reinstall it directly onto the turbo with the longer of the two hard pipes supplied, as shown. Do not tighten the jubilee clips yet.



5. Install the second shorter supplied hard pipe with the silicone connector in the middle, as shown. Then connect last silicone connector hose to your existing AIRTEC Motorsport boost pipe, as shown. Do not fully tighten the jubilees clips at this stage.



6. Install the brackets onto the car using the 12mm bolts removed in Step 3 and then attach the brackets using the supplied M6 bolts and washers, as shown.



7. Finally, once happy with the positioning of the pipework and silicone hoses proceed to tighten the brackets followed by all of the jubilee clips.